


TOSOT Parts Diagram

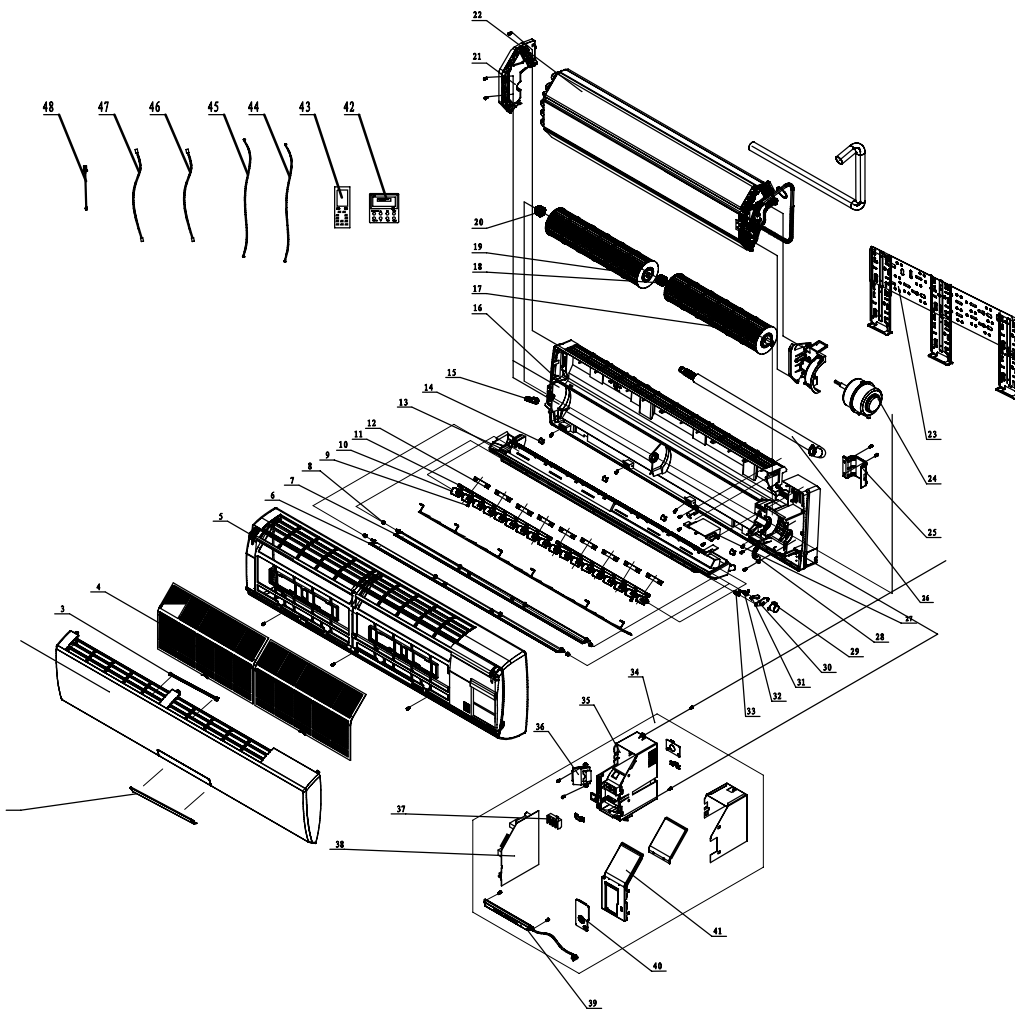

48	Ambient Temperature Sensor	
47	Tube Sensor	
46	Signal Wire	
45	Power Cord	
44	Connecting Cable	
43	Remote Controller	
42	Display Board	
41	Electric Box Cover	
40	Electric Box Cover	
39	Display Board	
38	Main Board	
37	Terminal Board	
36	Transformer	
35	Electric Box	
34	Electric Box Assy	
33	Lower crank	
32	Upper Crank	
31	Crank-guide	
30	Press plate (crank)	
29	Step Motor	
28	Motor Fixed Clip	
27	Cover Plate	
26	Drainage hose	
25	Pipe Clamp	
24	Fan Motor	
23	Wall Mounting Frame	
22	Evaporator Assy	
21	Left Evaporator Support	
20	O-Gasket sub-assy of Bearing	
19	Cross Flow Fan 2	
18	Bearing Holder sub-assy	
17	Cross Flow Fan 1	
16	Rear Case Sub-Assy	
15	Rubber Plug (Water Tray)	
14	Screw Cover	
13	Water Tray	
12	Louver Clamp	
11	Connecting Rod	
10	Air Louver 1	
9	Air Louver 2	
8	Axle Bush	
7	Lower guide louver	
6	Upper Guide Louver	
5	Front Case Sub-Assy	
4	Filter Sub-Assy	
3	Stand bar	
2	Front Panel	
1	Receiver Window	